

Toe Kick

Installation Guide

NOTE: This instruction sheet is for informational purposes only. Your working environment may differ from what is shown in the pictures. Please determine location of wiring and plumbing before you begin.

It is your responsibility to ensure proper installation and, if in doubt, contact customer service.

While our products are designed for homeowner installation, you assume all risk associated with the installation process. If you so choose you may refer to our video (<https://youtu.be/I718YmOhto4>) for these instructions.

The toe kick attaches to the side panels with an L-bracket designed to be held to your side panels using a system ("Euro") screw:




The easiest way to position the bracket is to line it up with the edge of the toe kick and mark the center of your holes 1½" from the bottom of the toe kick:



This will put the center bracket in alignment with the second hole from the bottom of your side panels.

If you prefer to measure for the hole, that would put the most inset hole at 1¼" from the side of the toe kick:

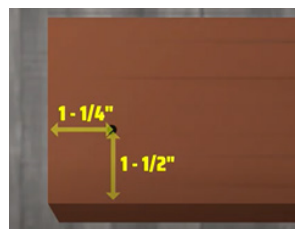


Toe Kick

Installation Guide

Attach the bracket to the toe kick using the included 5/8" screws:



Next, install a system screw ("Euro Screw") on each side panel in the second hole from the bottom. Install the screw only halfway, so that the bracket on the toe kick latch onto it:

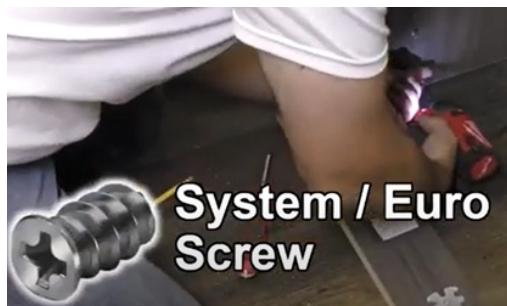

Slide the toe kick into place and then tighten down the euro screws:



Confirm that the rear cam locks on the bottom shelf are tightened:

Toe Kick

Installation Guide



Then lower the bottom shelf so it rests on the pegs above the toe kick:



If you have any drawers or additional accessories please refer to the instructions for each of them individually.

You may also refer to our videos by visiting the following website - <https://closetvids.com/>